# DIPHANO

Switch Fabric

COLLECTION SHEET

The Switch Fabric lights up your outdoor space. The satin white frame makes this robust collection sparkle with lightness and elegance. Thick, soft cushions invite you to plunge in them and relax. The soft fabric is weatherproof and detachable for easy maintenance.

collection overview

lounge chair

77-30.3"
61-23.8"
41-16.1"
73-28.7"
83-32.7"

2,5-seater

77-30.3"
61-23.8"
41-16.1"
73-28.7"
178-70.1"

loungers

35-13.8"
210-82.7"
82-32.3"

double lounger

35-13.8"
208-81.9"
142-55.9"

coffee table S

37-14.4"
62-24.4"
140-55.1"

technical information

MATERIALS & COLOURS

frame: pca | finishing: fabric | cushion set: fabric (FDF)

AF08
white

C802
seagull

C802
seagull

frame: pca | fabric: textylene | cushion set: fabric (FDF)

AF08
white

T008
white
batyline®

C802
seagull

frame: pca | table top: teak slats (18mm/0.71")

AF08
white

2H43
natural teaK
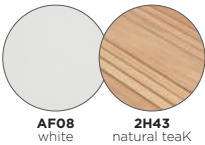
frame: pca | table top: ceramic (12mm/0.47")

AF08
white

2K05
marble white

OPTIONS

protective
cover

FEATURES

stackable
seaters

stackable
lounger

velcro fixation

waterproof

easy
maintenance

FOAM TYPE

type 7
fabric + interliner
+ indoor foam
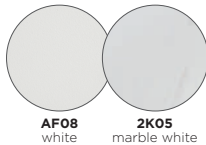
maintenance

POWDERCOATED ALUMINIUM

Simply brush away loose dirt, rinse, and clean with a mild, lukewarm soapy solution.
Rinse thoroughly and pat dry with a cloth.

FABRICS

Simply brush away loose dirt. Spray on a cleaning solution of water and mild soap.
Use a soft bristle brush to clean and allow cleaning solution to soak into the fabric.
Rinse thoroughly until all soap residue is removed and allow to air-dry.

NATURAL TEAK

Simply brush away loose dirt, rinse, and clean with a mild, lukewarm soapy solution.
Rinse thoroughly and pat dry with a cloth. If the teak is 100% dry and free of dust, you can apply our Teak stain protector
to make it repellent to water and moisture. Avoid the use of abrasive products and solvents and high pressure cleaning.

Teak stain protector
Saturates teak to make it repellent to water and moisture.
Helps to prevent stains (e.g. wine stains, barbecue stains...).
Easy to apply. Transparent finishing.

CERAMIC

Simply brush away loose dirt, rinse, and clean with a mild, lukewarm soapy solution or Ceramic cleaner.
Rinse thoroughly and pat dry with a cloth.

Glass, ceramic, Trespa® cleaner & polisher
Makes hard surfaces repellent to water, moisture and dirt.
Cleans and removes stains without scratching using the included cloth.

DIPHANO

OUTDOOR FURNITURE